


CONNECTIONS OF FLEXIPIPE

Joining FlexiPipe to FlexiPipe

EUROFLO[®] FlexiPipes come in 5.8m lengths and have bayonet connections for easy joining.


STEP 1

Align the arrows on the spigot end and socket end of the FlexiPipe.

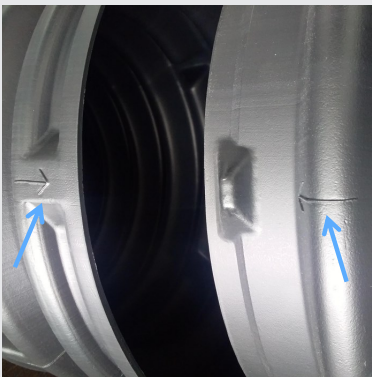

STEP 2

Insert the leading edge of the spigot into the socket flare.

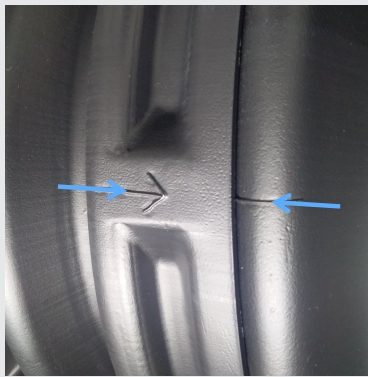

STEP 3

Once completely inside, rotate one section 45° to lock the two FlexiPipes together.




STEP 4


These joins must be wired together after assembly to prevent risk of separation.



STEP 5 - Use a 10mm drill bit to drill holes on each side of the join.

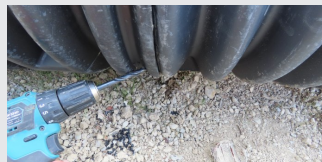


STEP 6 - Add a slight bend to the wire before feeding through the predrilled holes.

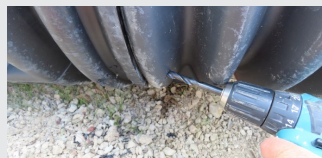

STEP 7

Equally spaced 2.5mm galvanised annealed tie wires (~250mm long) must be used to secure the pipes.

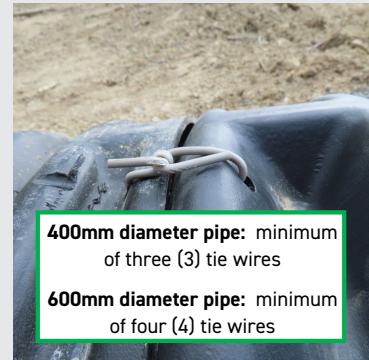

400mm diameter pipe: minimum of three (3) tie wires
600mm diameter pipe: minimum of four (4) tie wires