



CONNECTING EUROFLO[®] TO CONCRETE MANHOLES

CONNECTION WITHOUT A EUROFLO[®] JOINER

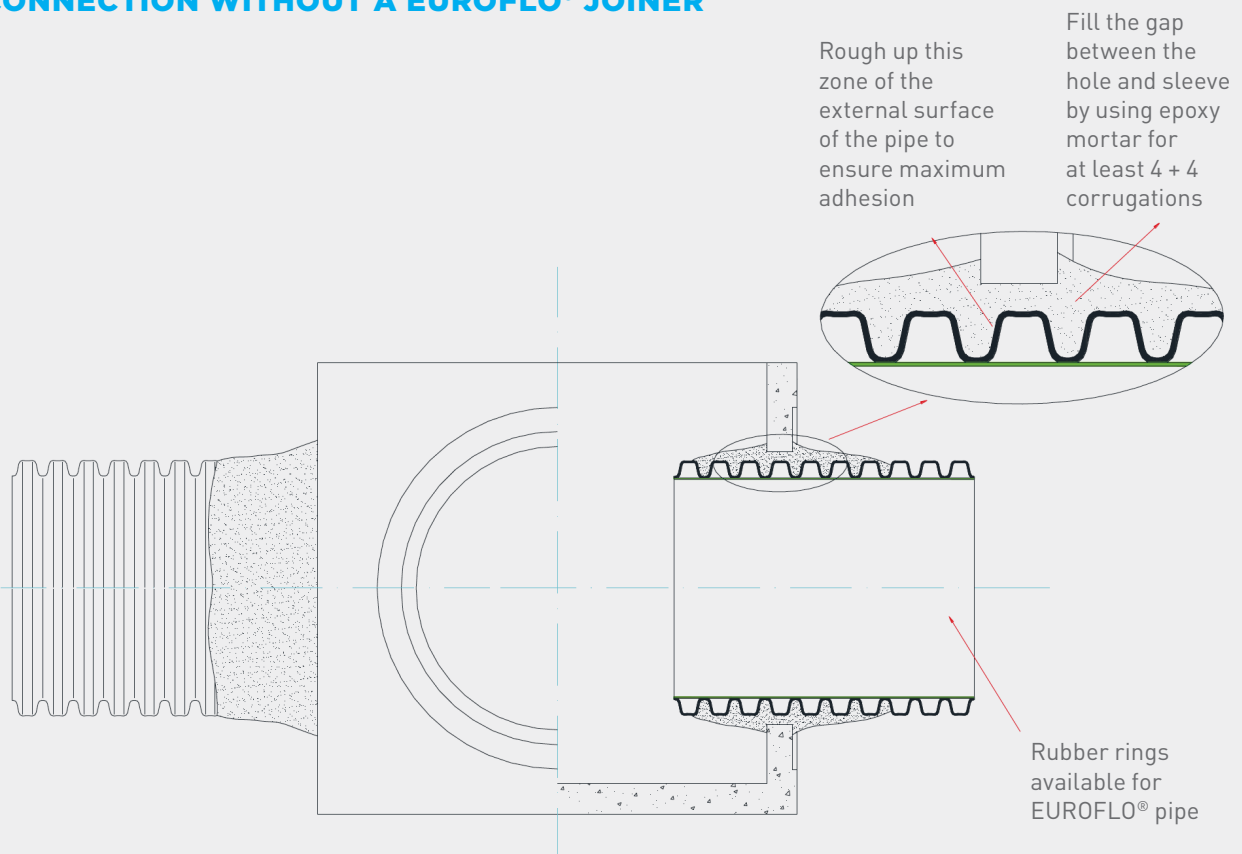

This information is valid for all SN ratings.


CONNECTIONS WITH A EUROFLO® JOINER

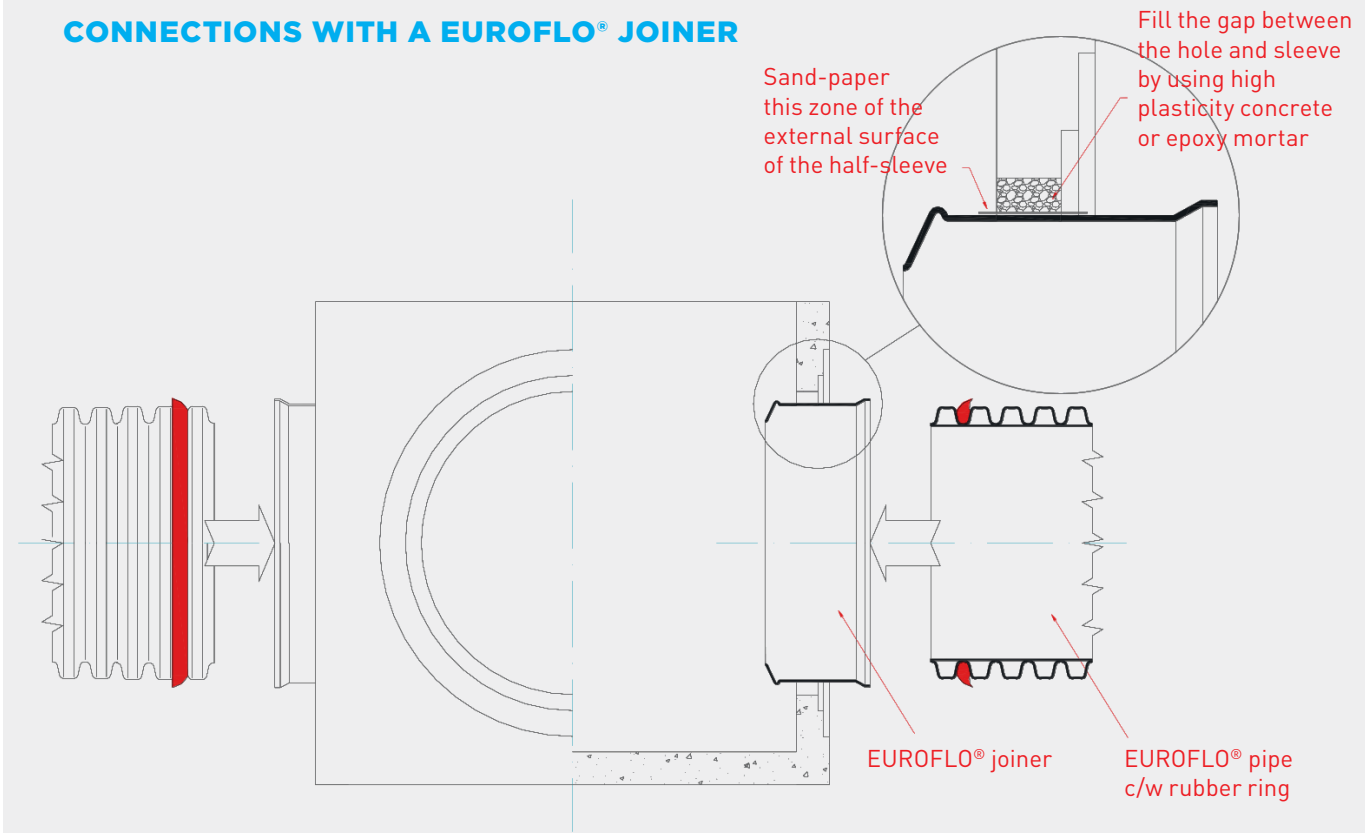

Valid for SN8 pipe.

Full joiner can be used. Half joiner shown.

CONNECTIONS WITH A EUROFLO® JOINER (EXPANDED VIEW)

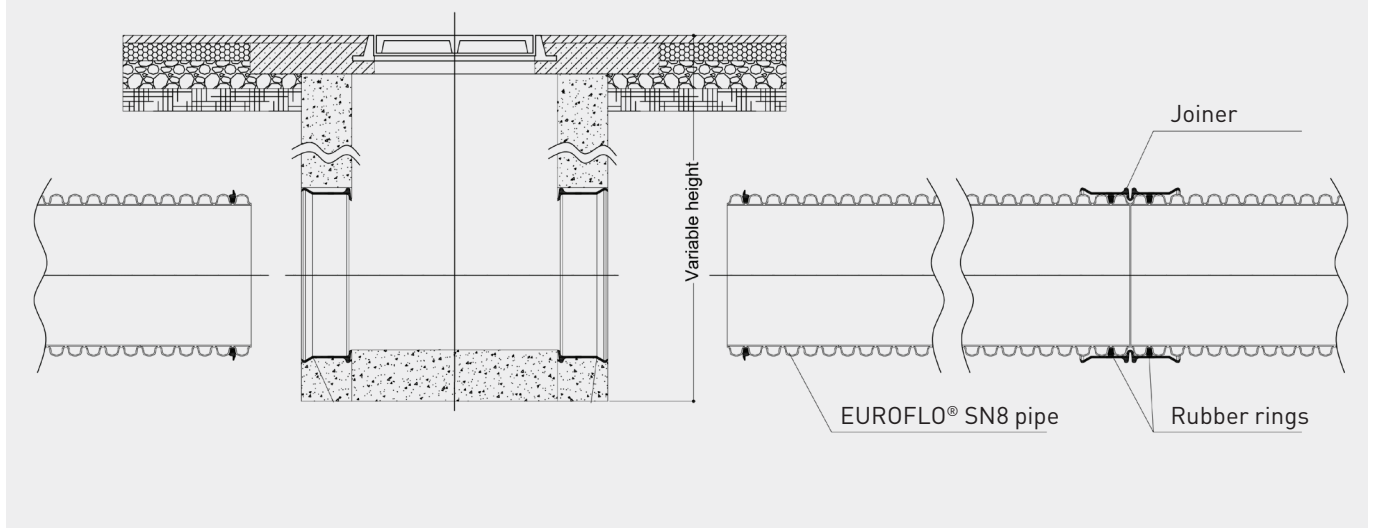

IN SITU PIPE INSTALL OF FLEXIBLE JOINT

1. Insert short section loosely into manhole at correct invert (A)
2. Cut extra length with socket end to go between existing pipe and where section (A) will be permanently
3. Slide section (A) into manhole, drop section (B) in
4. Slide (A) over section (B) and finish the epoxy seal on (A) as diagram on front page
5. Completed pipeline

