


# CONNECTING EUROFLO<sup>®</sup> TO CONCRETE MANHOLES

## CONNECTION WITHOUT A EUROFLO<sup>®</sup> JOINER


Rough up this zone of the external surface of the pipe to ensure maximum adhesion

Fill the gap between the hole and sleeve by using epoxy mortar for at least 4 + 4 corrugations

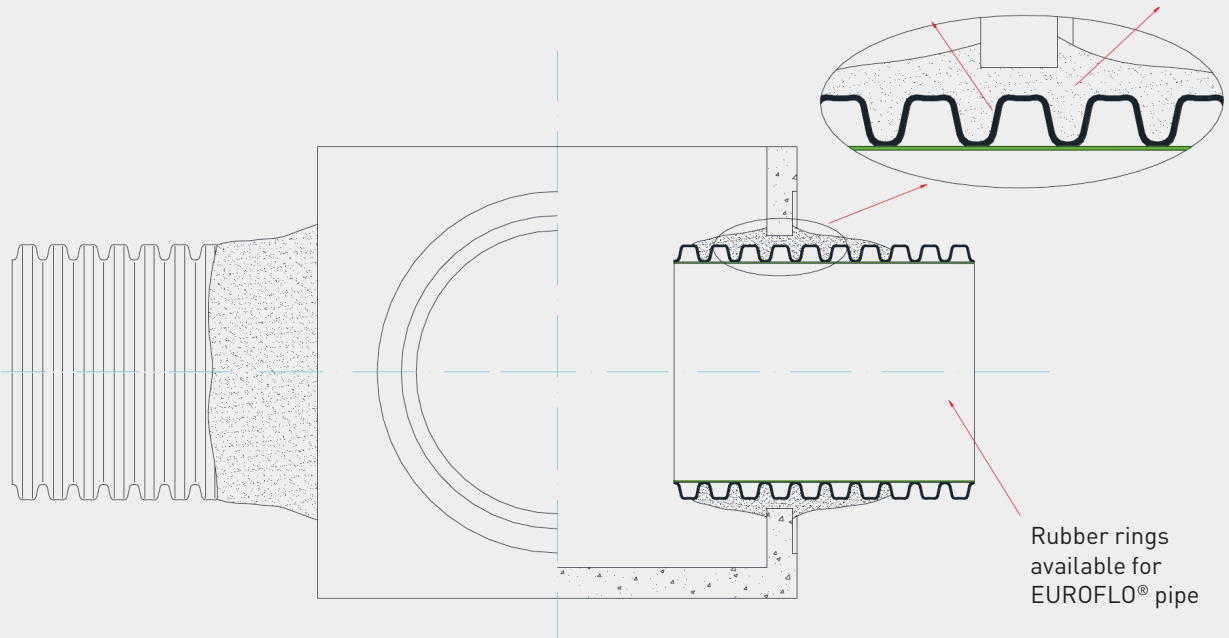

This information is valid for all SN ratings.

## CONNECTIONS WITH A EUROFLO® JOINER

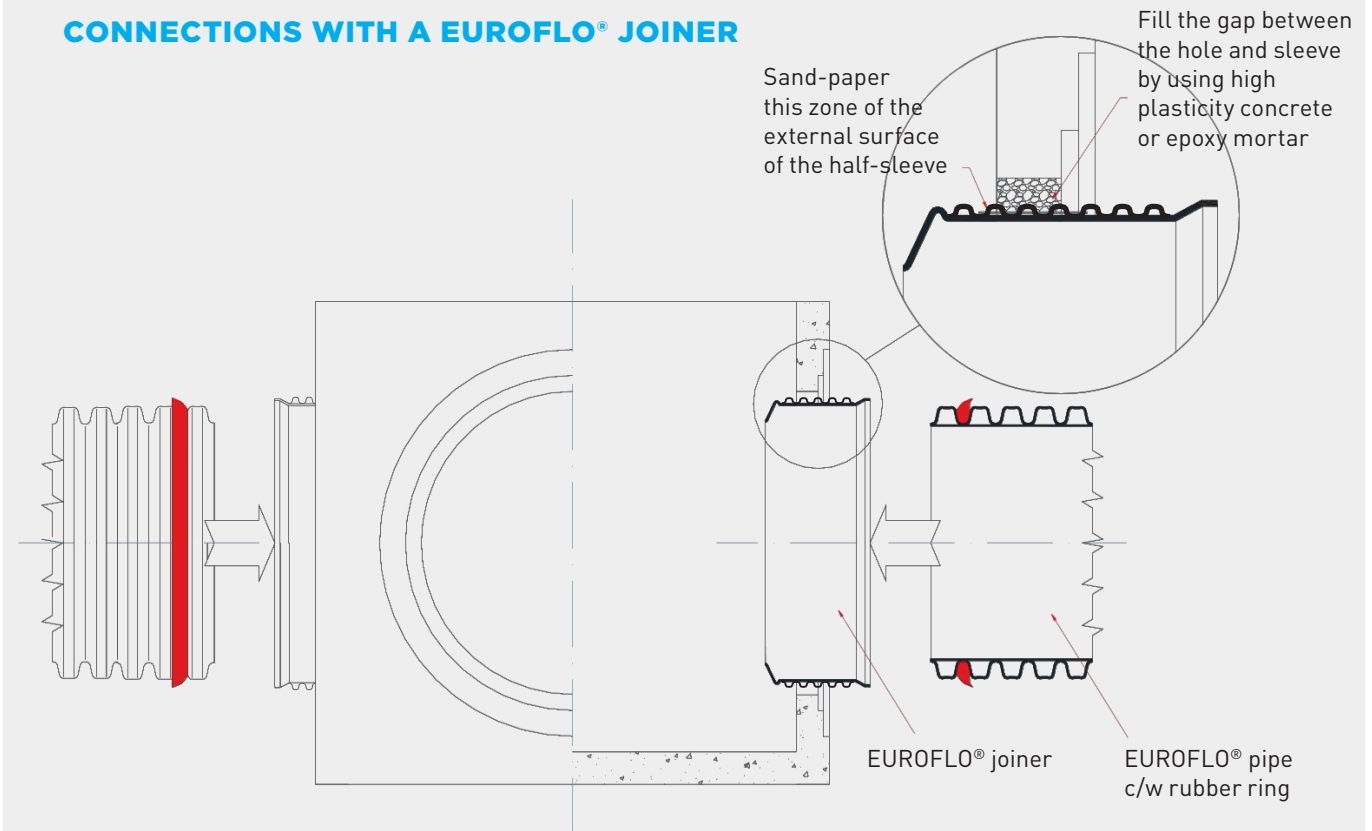


Valid for SN8 pipe.

Full joiner can be used. Half joiner shown.

EUROFLO® joiner has a ribbed exterior that locks in well with the epoxy mortar

## CONNECTIONS WITH A EUROFLO® JOINER (EXPANDED VIEW)

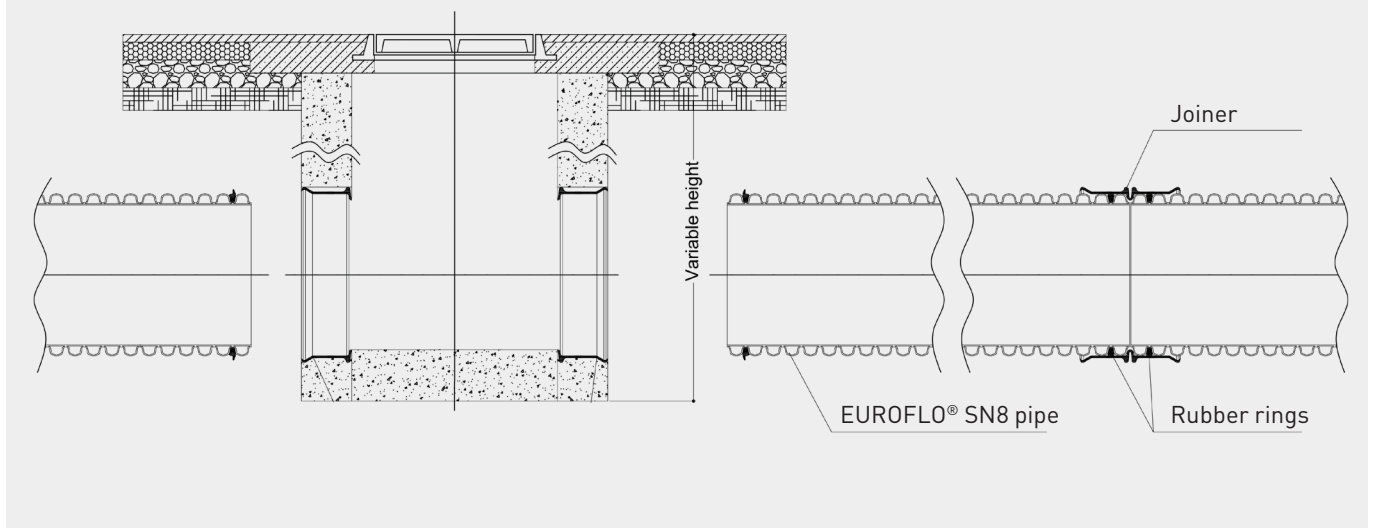

## IN SITU PIPE INSTALL OF FLEXIBLE JOINT

1. Insert short section loosely into manhole at correct invert (A)
2. Cut extra length with socket end to go between existing pipe and where section (A) will be permanently
3. Slide section (A) into manhole, drop section (B) in
4. Slide (A) over section (B) and finish the epoxy seal on (A) as diagram on front page
5. Completed pipeline

